


## **ASSEMBLY, ADJUSTMENT & PARTS**

### **MOUNTED HEAVY DUTY COIL TINE HARROW**

FOR 5800, QUAD 4 CHISEL PLOWS AND

**800NT SERIES WISHEK DISKS** 

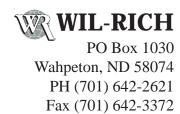

### PERSONAL SAFETY IS IMPORTANT!

ALL PERSONNÉL INVOLVED WITH THE ASSEMBLY AND/OR OPERATION OF THIS EQUIPMENT MUST BE INFORMED OF PROPER SAFETY PROCEDURES. OPERATOR'S AND ASSEMBLY MANUALS PROVIDE THE NECESSARY INFORMATION. IF THE MANUAL IS LOST FOR A PARTICULAR IMPLEMENT, ORDER A REPLACEMENT AT ONCE. OPERATOR'S AND ASSEMBLY MANUALS ARE AVAILABLE AT NO CHARGE UPON REQUEST.

**ADDRESS INQUIRIES TO:** 

**WIL-RICH** 

**PO BOX 1030** 

WAHPETON, ND 58074

PH (701)642-2621 FAX (701)642-3372

Remove all wires and arrange the parts conveniently.

NOTE: Always wear safety glasses or goggles and be careful when cutting wires and steel bands as they are under tension and will spring back when cut.

Wherever the terms "left" and "right" are used, it must be understood to mean from a position behind and facing the machine.

Lubricate all bearings and moving parts as you proceed and make sure they work freely.

Loosely install all bolts connecting mating parts before final tightening.

When tightening bolts, they must be torqued to the proper number of foot-pounds as indicated in the table unless specified. It is important that all bolts be kept tight.

On new machines, all nuts and bolts must be rechecked after a few hours of operation.

GRADE 2	G	RADE	5	GRADE 8						
	<			( <u>, , )</u>						
TORQUE IN FOOT POUNDS										
BOLT DIA	3/8	1/2	5/8	3/4	7/8	1				
HEX HEAD	9/16	0/16 3/4 1		1-1/8	1-5/1	1-1/2				
UNC GR2	18	45	89	160	252	320				
UNC GR5	30	68	140	240	360	544				
UNC GR8	40	100	196	340	528	792				
UNF GR2	21	51	102	178	272	368				
UNF GR5	32	70	168	264	392	572				
UNF GR8	48	112	216	368	792	840				

### CAUTION

TO AVOID INJURY AND/OR MACHINE DAMAGE:

- Refer to Operator's Manual for safety instructions.
- Do not stand or climb on machine when operating.
- Use clean hazard flashers and SMV sign when transporting.
- Observe highway traffic regulations.

23325

### ASSEMBLY INFORMATION

When replacing a bolt, use only a bolt of the same grade or higher. Except in shear bolt applications, where you must use the same grade bolt.

Bolts with no markings are grade 2

Grade 5 bolts furnished with the machine are identified by three radial lines on the head.

Grade 8 bolts furnished with the machine are identified by six radial lines on the head.

#### All U-bolts are grade 5.



THIS SYMBOL USED TO CALL YOUR ATTENTION TO INSTRUCTIONS CON-CERNING YOUR PERSONAL SAFETY.

BE SURE TO OBSERVE AND FOLLOW THESE INSTRUCTIONS


### **A** CAUTION


Failure to follow these instructions may result in personal injury and/or equipment damage.

- Just before and during operation be sure no one is on or around the implement.
- Before activating the hydraulic system, check hoses for proper connections.
- Before lowering the wings for the first time, make sure the entire system has been charged with oil.
- With wings down always install hydraulic cylinder channel lock(s) for transporting.


# HARROW OPERATION SECTION LEVEL ADJUSTMENT


To set the harrow working depth, first set the chisel plow to its working position. Remove the 5/8NCx5 GR5 bolt and relocate as required. The section should be set to run 3" to 5" deep in the working position.

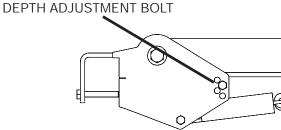

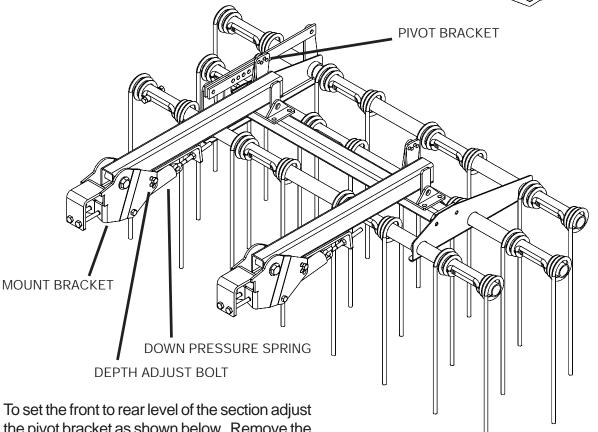


To set the front to rear level of the section adjust the pivot bracket as shown below. Remove the 1/2NCx1-1/2 GR5 bolts and rotate the section until the section is level. Reinstall bolts and tighten to specified torque.

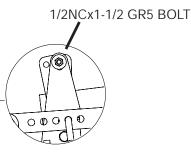


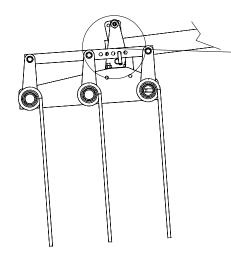

### HARROW ARM/PIVOT BRACKET ASSEMBLY

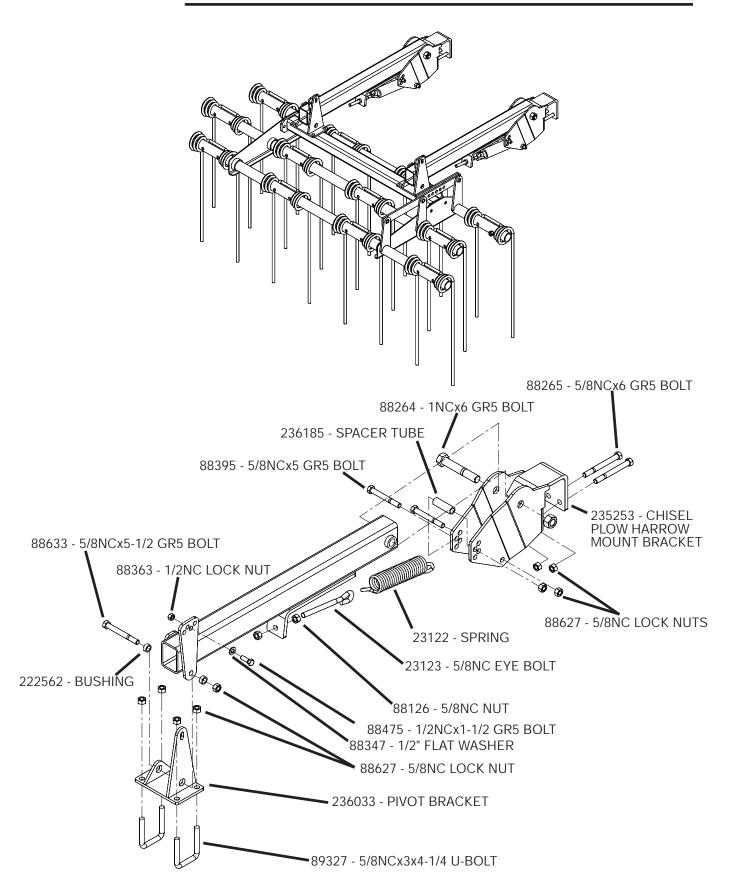

## HARROW SECTION ASSEMBLY

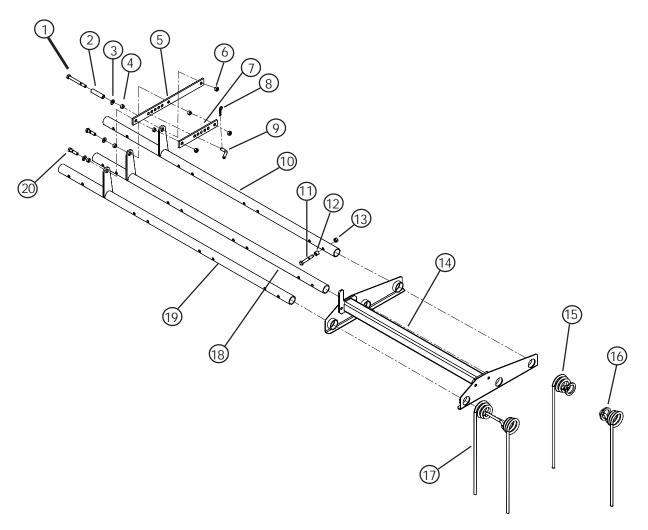

1 2 3 4 5 6 7 8 9 10	PART NO. 88295 22521 88277 222562 222570 88627 222575 23039 32871 222574 222569 236027 88298	DESCRIPTION 5/8NCx6 GR5 BOLT SPACER TUBE 5/8 FLAT WASHER BUSHING ADJUST BAR 5/8NC LOCK NUT INNER ADJUST BAR HAIR PIN 5/8x1-3/8 BENT PIN 8FT REAR HARROW TUBE 6FT REAR HARROW TUBE 4FT REAR HARROW TUBE 5/8NCx4 GR5 BOLT QTY - 24-8FT 18-6FT 12-4FT	17 18 19 20	236021 236020 236087 222573 222568 236026 222572 222567 236024 88409	DESCRIPTION  QTY 3/ 4FT SEC. R SINGLE HARROW TOOTH QTY 3/ 4FT SEC. L SINGLE HARROW TOOTH SHORT H.D. HARROW TOOTH QTY - 12/ 8FT SEC 9/ 6FT SEC 3/ 4FT SEC 8FT CENTER HARROW TUBE 6FT CENTER HARROW TUBE 4FT CENTER HARROW TUBE 8FT FRONT HARROW TUBE 6FT FRONT HARROW TUBE 4FT FRONT HARROW TUBE 4FT FRONT HARROW TUBE 5/8NCx2-1/2 GR5 BOLT
12 13 14	200479 88845 236195 236198 236028	BUSHING 5/8NC LOCK NUT 8FT HARROW MOUNT WELD 6FT HARROW MOUNT WELD 4FT HARROW MOUNT WELD			

### **INTERMEDIATE TUBE ASSEMBLY**

NOTE: THIS IS FOR GENERAL ASSEMBLY
INSTRUCTIONS. HARROWS CAN HAVE
DIFFERENT SECTION ARANGMENTS.

236038 - STUB

236040 - SHORT INTERMEDIATE TUBE (FOR
USE WITH 4FT SECTION
ONLY)

236189 - INTERMEDIATE
STUB WELD - 5 SHANK 30"

88294 - 5/8NCx2
GR5 BOLT


88627 - 5/8NC
LOCK NUT

236042 - LONG HARROW STUB

**8FT SECTION** 


4FT SECTION

### SINGLE HARROW ARM SUPPORT ASSEMBLY

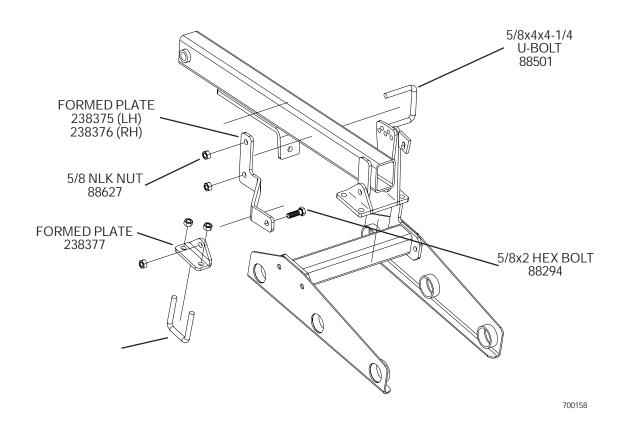

THIS KIT IS DESIGNED TO BE USED ON HARROW SECTION THAT ARE SUPPORTED WITH ONE ARM. USUALLY THEY ARE 4FT SECTION ON OUTER WINGS OF MACHINES

### **HARROW STOP ARM ASSEMBLY**

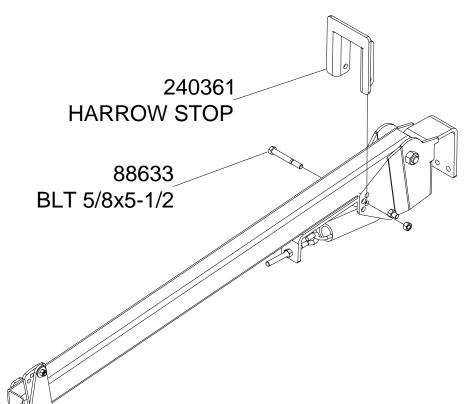


ASSEMBLE HARROW STOP 240361 AS SHOWN REPLACEING 5/8x5 BOLT WITH BOLT SUPPLIED. THIS SHOULD BE DONE ON OUTER WINGS TO PREVENT HARROW DAMAGE.

### **CHISEL PLOW HARROW MOUNTING CHART**

			х х	APPROX ARM LOCATION (IN FR	OM CENTER)
			x x x	SECTION, STUBS, SPANN	ERS & EXT
CHISEL MODEL	OUTER	WINGS	MAIN FRAME	WINGS	OUTER
	WINGS			_	WINGS
			29 29		
CPR 10			6ft 46"SP 6ft		
			47 47		
CPR 10-12			6ft 46"SP 8ft		
			47 47		
CPR 10-14			8ft 46"SP 8ft		
		96	29 29	96	
CPR 18		4ft	6ft 46"SP 6ft	4ft	
CPW 18-20		109 4ft	47 47 6ft 46"SP 8ft	109 4ft	
CPVV 10-20		138 100	29 29	100 138	
CPW 22	EXT	22.5"STUB 6ft	6ft 46"SP 6ft	6ft 22.5"STUB	EXT
0 22		138 100	47 47	100 138	
CPW 22-24	EXT	<del> </del>	5"STUB 6ft 46"SP 8ft	15.5" STUB 6ft 15.5"STUB	EXT
		138 100	29 29	100 139	
CPW 22-26	EXT	8ft	6ft 46"SP 6ft	8ft	EXT
		123 89	37 8 45	89 123	
CPW 28		8ft	6ft 46"SP 8ft	8ft	
		136 100	47 8 47	100 136	
CPW 28-30		4ft 39"SP 6ft 15.5	5"STUB 6ft 46"SP 6ft	15.5"STUB 6ft 39"SP 4ft	
		148 100	47 8 45	100 148	
CPW 25		22.5 STUB 6ft	6ft 46"SP 8ft	6ft   22.5 STUB	
		156 124	65 8 57	124 156	
CPW 25-27	EXT	15.5 STUB 6ft	8ft 46"SP 8ft	6ft   15.5 STUB	EXT
0044.05.00	D/T	162 119	37 8 45	119 162	D/T
CPW 25-29	EXT	15.5 STUB 8ft 163 127	6ft 46"SP 8ft 65 8 57	8ft   15.5 STUB   127   163	EXT
CPW 31		8ft	65 8 57 8ft 46"SP 8ft	127 163 8ft	
Cr W 31		165 89	55 8 47	89 165	
CPW 31-33		4ft 39"SP 6ft 15.5	<del></del>	15.5"STUB 6ft 39"SP 4ft	
		192 129	65 8 57	129 192	
CPW 31-35	EXT	6ft 39"SP 4ft	8ft 46"SP 8ft	4ft 39"SP 6ft	EXT
		192 129	65 8 57	129 192	
CPW 31-35	EXT	6ft 39"SP 4ft	8ft 46"SP 8ft	4ft   39"SP 6ft	EXT
	203	165 115	55 8 47	115 165	203
CPW 31-37	4ft	15.5"STUB 8ft	6ft 46"SP 8ft	8ft 15.5"STUB	4ft
	211	164 128	65 8 57	128 164	211
CPW 31-39	4ft	8ft	8ft 46"SP 8ft	8ft	4ft
		195 150 115	55 8 47	115 150 195	
CPW 37		6ft   46"SP   6ft	6ft 46"SP 8ft	6ft 46"SP 6ft	
ODM 07 00		207 157 128	65 8 57	128 157 207	
CPW 37-39		6ft 46"SP 6ft	8ft         46"SP         8ft           55         8         47	6ft   46"SP   6ft   115   150   207	
CPW 37-41		207 150 115 8ft 46"SP 6ft	55 8 47 6ft 46"SP 8ft	115 150 207 6ft 46"SP 8ft	
OF W 3/-41	241	186 150 115	65 8 57	115 150 186	241
CPW 37-43	4ft	4ft 39"SP 6ft	8ft 46"SP 8ft	6ft 39"SP 4ft	4ft
2. 1. 01 70	246	195 157 115	55 8 47	115 157 195	246
CPW 37-45	4ft	6ft 46"SP 6ft	6ft 46"SP 8ft	6ft 46"SP 8ft	4ft
-			1.0		

### **EXAMPLE FOR HARROW ASSEMBLY**

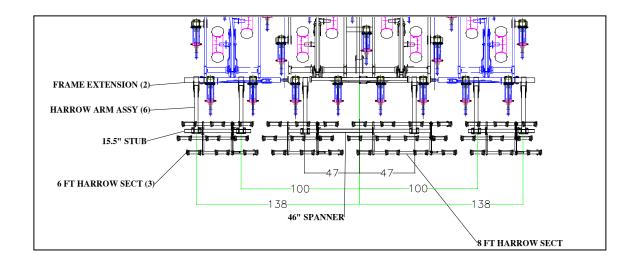


#### **EXAMPLE CPW 22-24**

		138	100	47 47	100 138	·
CPW 22-24	EXT	15.5"STUB	6ft 15.5"STUB	6ft 46"SP 8ft	15.5" STUE 6ft   15.5"STUB	EXT

# 800NT SERIES WISHEK DISK HARROW MOUNTING CHART

DISK				<b>x</b>	х	x AF		LOCATION (IN FF N, STUBS, SPANN	,
MODEL	FRAME	WINGS		MAIN FR	AME			WINGS	FRAME
14 disk	EXTENSIONS	•		8ft	46"SP	8ft			EXTENSION EXT
				52		52	1	7	
16 disk	EXT		6ft	<b>46"SP</b>	<b>6ft</b> 8	<b>46'SP</b>	6ft	7	EXT
18 disk	EXT		6ft	46"SP	8ft	46'SP	6ft	T	EXT
TO WICK			72	22	0.1	22	72	†	
22 disk		8ft			8ft			8ft	
		110 92	2	22		22		92 110	
24 disk	EXT	8ft	1	6ft	38"SP	4ft		8ft	EXT
		134 99	9	27		27		99 134	
26 disk	EXT	8ft	4	6ft	46"SP	6ft		8ft	EXT
		134 100	<u>)</u>	27		27		100 134	
30 disk	EXT	8ft 15.5 STUB	-	8ft	46"SP	8ft		15.5 STUB 8ft	EXT
34 LNT disk		134 100	7	27	in Mark t	27		100 134	
34 LIVI UISK		78in Mnt tube 6ft 46"SP 6ft	†	6ft	oin Mnt t			78in Mnt tube 6ft 46"SP 6ft	
		178 143 110		45	2	45		110 143 178	
38 LNT disk		78in Mnt tube	1	-	)in Mnt t			78in Mnt tube	
		8ft 46"SP 6ft	1	6ft	46"SP			6ft 46"SP 8ft	
		178 143 110	)	45	2	45		110 143 178	

### **EXAMPLE FOR HARROW ASSEMBLY**

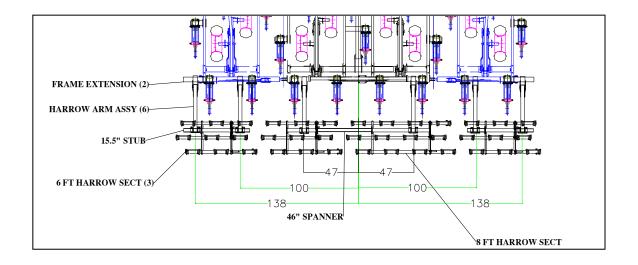

#### **EXAMPLE CPW 22-24**

		138	100		47		47		100		138	
CPW 22-24	EXT	15.5"STUB	6ft	15.5"STUB	6ft	46"SP	8ft	15.5" STUB	6ft	15.5"S	TUB	EXT